


UNION SWITCH & SIGNAL CO.

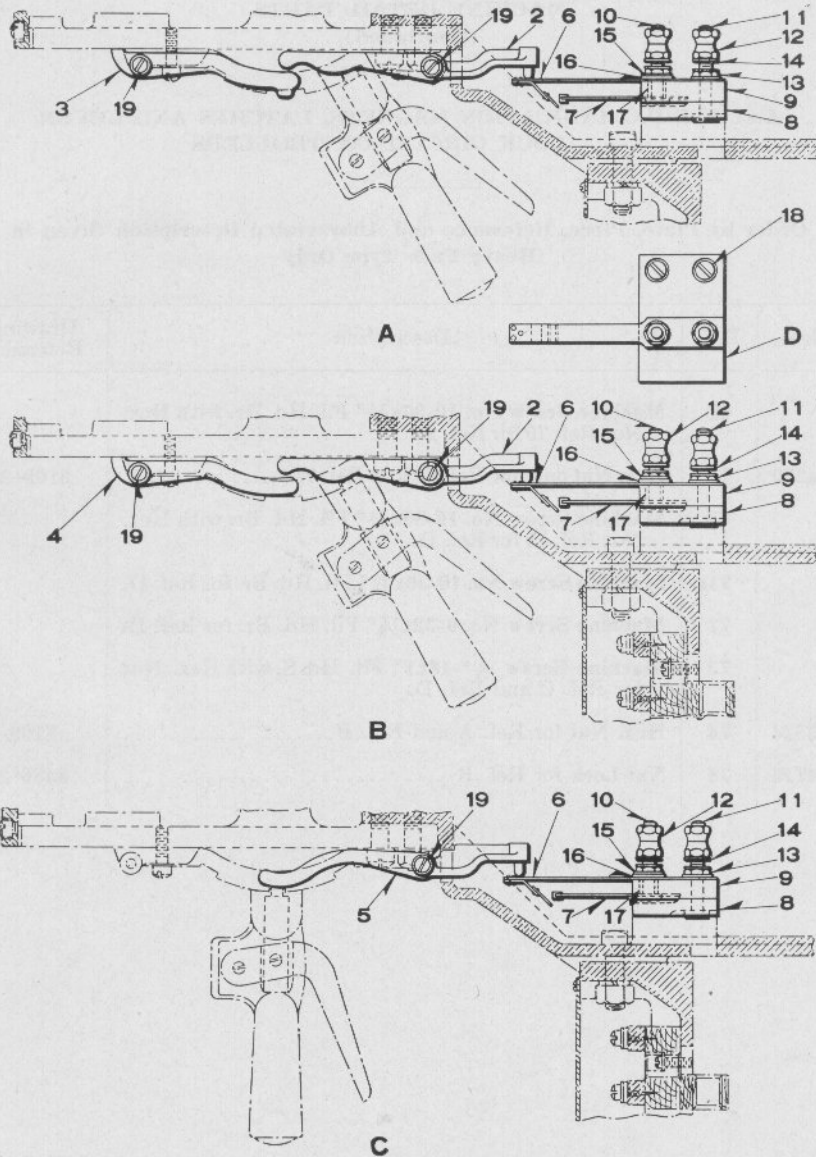

LATCH CIRCUIT CONTROLLERS WITH ONE CONTACT

UNION SWITCH & SIGNAL CO.

STYLE "S-8" ELECTRO-MECHANICAL INTERLOCKING
MACHINE DETAIL PARTSLATCH CIRCUIT CONTROLLERS
WITH ONE CONTACTOrder by Plate, Piece, Reference and Abbreviated Description Given in
Heavy Face Type Only

Piece	Ref.	Description	Drawing Reference
	A	Latch Circuit Controller, complete for Switch Indicating or Detector Lever with one contact open at "N," "C" and "R." (Lever normally in back position).....	D-1524-12
	B	Latch Circuit Controller, complete, for Switch Lever, with one contact open at "N" and "R." (Lever normally in back position).	
	C	Latch Circuit Controller, complete for Signal Lever, with one contact open at "N" only. (Lever normally in center position).	
	D	Contact Spring Board, complete with Contact Springs Terminal Posts, Ins. Washers, Ins. Bushings and Screws as shown (Inc. 1-6, 1-7, 1-8, 1-9, 2-11, 1-16, 1-17 and 2-18).....	9968-426
	Da	Contact Spring Board, complete with Contact Springs Terminal Posts, Ins. Washers, Ins. Bushings and Screws (with one extra Terminal Post) (Inc. 1-6, 1-7, 1-8, 1-9a, 3-11, 2-16, 2-17 and 2-18).....	9968-426
70100	2	Operating Crank, complete for Refs. A and B.....	C-4277-4
110788	3	Operating Crank for Ref. A.....	C-4277-6
32951	4	Operating Crank for Ref. B.....	C-4277-4
111453	5	Operating Crank, complete for Ref. C.....	C-4277-6
70427	6	Contact Spring, complete for Refs. A, B and C.....	8385-1342
70426	7	Contact Spring, complete for Refs. A, B and C.....	8385-1341
64761	8	Contact Spring Board for Refs. A, B and C.....	9968-426
	9	Contact Spring Board for Refs. A, B and C.....	9968-426
65270	9a	Contact Spring Board with one extra terminal post hole	9968-426

PLATE A-1035

UNION SWITCH & SIGNAL CO.

STYLE "S-S" ELECTRO-MECHANICAL INTERLOCKING MACHINE DETAIL PARTS (Continued)

LATCH CIRCUIT CONTROLLERS WITH ONE CONTACT

Order by Plate, Piece, Reference and Abbreviated Description Given in
Heavy Face Type Only

Piece	Ref.	Description	Drawing Reference
120754	10	Terminal Post, complete with Nuts, Ins. Washers, Ins. Bushing and Washers for Ref. D.....	12451-163
40066	10a	Terminal Post, only for Ref. 10.....	8097-797
96406	11	Terminal Post, complete with Nuts and Washers for Ref. D.....	12451-44
29147	11a	Terminal Post, only for Ref. 11.....	8094-706
29101	12	Hex. Nut for Refs. 10 and 11.....	8109-193
29103	13	Hex. Nut for Refs. 10 and 11.....	8109-194
29102	14	Washer for Refs. 10 and 11.....	7828-139
29104	15	Washer for Refs. 10 and 11.....	7828-138
9468	16	Ins. Washer for Ref. 10.....	8078-76
10442	17	Ins. Bushing for Ref. 10.....	B-10270-1
	18	Machine Screw No. 14-24x1 $\frac{1}{4}$ " Fil. Hd. S. with Wash- er Ref. 18a for attaching contact spring board to Unit.	
939	18a	Washer for Ref. 18.....	7828-7
114976	19	Screw for attaching Operating Cranks to Unit.....	8098-929